




SO30, SO36 & DO30 Built-In Oven Showroom Demonstration Wiring Configuration

Procedure to set up to run at 120 VAC for showroom purposes:

Please have a qualified electrician make all connections

1. Splice L1 (Black wire) and L2 (Red wire) together and connect to L1 from wall receptacle.
2. Connect Neutral (white wire) to Neutral from wall receptacle.
3. Connect Ground (green wire) to Ground from wall receptacle.

Diagram

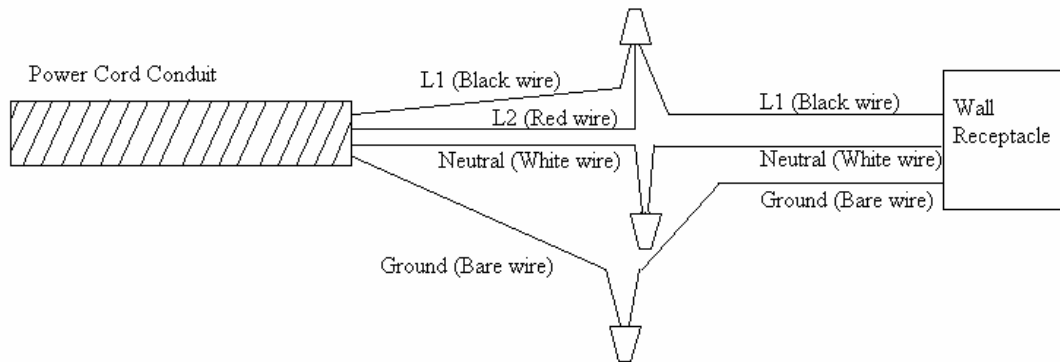

1/17/02